


# Air Compressor Fault Finding Guide



## Air Compressor NOT turning ON?

If your air compressor isn't powering up, follow these steps to diagnose and resolve the issue.

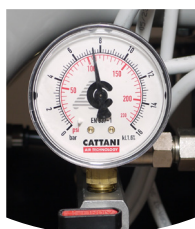


### Check the Pressure Gauge

If the reading is below 6 bar, there's a fault. If it's above 6 bar, the compressor won't turn on as it already has pressure.



### Examine all Switches

Ensure all switches are in the 'ON' position. Look for a small reset button - typically black. Press it to reset the system.

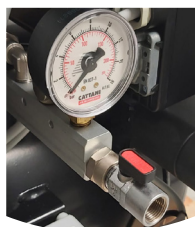

### Inspect the Outlet Valve

The valve handle on the compressor's outlet should align with the pipe. If not, adjust it accordingly.



### Check the Drain Valve

Ensure the drain valve is closed, especially if it was used for draining the air receiver at the end of the previous day.

## Troubleshooting

Address common problems with these solutions.



### Compressor Overheating

Ensure adequate ventilation around the compressor.



### Power Troubles

Check for a blown fuse or interrupted power supply.



### Capacity and Usage

Do not exceed the compressor's designed capacity.



### Airline Checks

Listen for air leaks from the pipework or the dental chairs.

# Air Compressor Fault Finding Guide



## Maintenance Tips

Ensure your air compressor operates efficiently and safely with these maintenance tips.

### Regular Leak Checks

Regularly inspect pipework for any leaks to ensure and preserve system efficiency.

### Drain the Air Receiver

For models without a dryer, drain more often. Remember to close the drain valve afterwards.

### Workload Management

Use compressor within its designed capacity to avoid overworking.

## Need Further Assistance?

If your air compressor is still malfunctioning, or if the problem persists despite following these steps, please contact our support team.

**Call us on 01322 421156 for immediate assistance.**

Alternatively, for access to our free remote support service, simply scan the QR code.

